

FRONT



WAQ LED LANTERN 2

取扱説明書




Folding Line


Folding Line

Folding Line

付属品

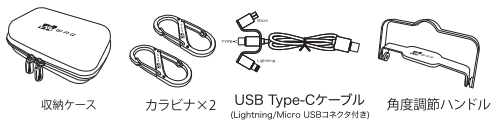

製品詳細

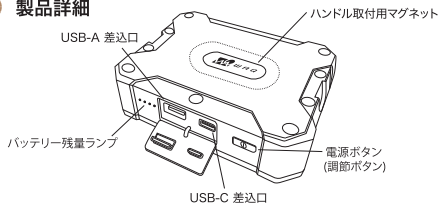


製品スペック

製品名	WAQ LED LANTERN2
サイズ/重量	11.5 x 8.5 x 3(cm) / (約)700g
LED種類	昼光色(5700K) / 昼白色(4500K) / 電球色(3000K)
明るさ(最大-最小)	1650lm - 250lm
バッテリー容量	13400mAh / 3.7V
防水性能	IP67
製品の充電可能回数	500回以上
使用可能時間	8.5 - 60時間(最高輝度 - 最低輝度)
充電時間	(約)3時間【Quick Charge搭載】
入力/出力	USB-C Input/Output : PD22.5W USB-A Output : QC3.0

使用方法

ランタンの充電完了後、電源ボタンを押すことで光量の調節が可能です。また、お手持ちのスマートフォンなどを充電するモバイルバッテリーとして使用することも可能です。

電源ボタンを1回押す/電源ON
電源ボタンを2回押す/最高輝度
電源ボタンを3回押す/中輝度
電源ボタンを4回押す/低輝度
電源ボタンを5回押す/再低輝度
電源ボタンを6回押す/SOSモード
電源ボタンを7回押す/電源OFF

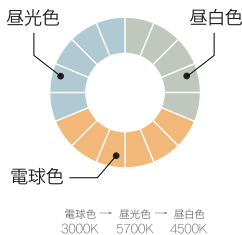

電源ボタンを2秒間押すと、LEDの色温度が変わります。
ランタンの使用から15秒以上経過後、電源ボタンを一回押すと自動的に電源がOFFになります。

充電時のランプ表示



使用時のランプ表示



充電方法(ランタン本体)

付属のUSB Type-Cを使用し、ランタン本体のType C差込口に接続することで充電が開始されます。ACアダプタやPCなどから給電してください。(※USB Type C以外では充電できません。ご注意ください。)

モバイルバッテリーとしての使い方

付属のUSBケーブルをランタン本体のUSB差込口へ差し込み、お使いのモバイル機器に対応したコネクタを装着して充電を行ってください。
※満充電時でiPhone13Proを約3回充電することが可能です。

注意事項


- ・充電中は安全のためランタンを使用しないでください。
- ・製品の光を直接目に当てないようにご注意ください。
- ・お子様が使用される場合は、必ず保護者様同伴のもとで、危険な使い方をしないようご注意ください。
- ・極端に低温・高温な場所、及び湿気やホコリの多い場所では保管しないようご注意ください。
- ・故障の原因となりますため落下や衝突など、製品に強いショックを与えないようご注意ください。
- ・本製品には防水機能が備わっておりますが、水中での使用は絶対にお止めください。
- ・ご使用中に本製品に異常が見られた場合、すぐにご使用をお控えいただき弊社までご連絡くださいませ。
- ・本製品は連続点灯すると熱をもつ場合がございます。
- ・充電器としての使用前にお使いの機器に対応したコネクタを必ずご確認ください。
- ・製品の落下など、お客様自身による破損につきましては保証の対象外となりますのでご了承くださいませ。

BACK

Product components

Lantern , CASE , User Manual , Magnet Handle x 1 , Carabiner x 2 , USB Type-C Cable(With : Micro / Lightning Connector)

Product Name

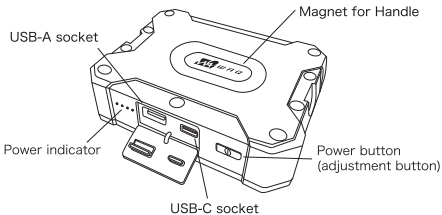


Specification

Product	WAQ LED LANTERN2
Size/Weight	11.5 x 8.5 x 3(cm) / 700g
LED temperature	White(5700K) / White+Warm(4500K) / Warm(3000K)
Brightness	1650lm - 250lm(Max - Min)
Battery capacity	13400mAh / 3.7V
Waterproof	IP67
Battery lifespan	500times more
Lighting time	8.5 - 60hours(Max - Min)
Charing time	about 3hours【Quick Charge】
Input/Output	USB-C Input/Output : PD22.5W USB-A output : QC3.0

How to use

After charging Lantern, Press the power button and use for lantern and it also can be used as power bank through output of Lantern


- Press Power Button Once / Power ON
- Press Power Button Twice / Max Brightness
- Press Power Button 3times / Middle Brightness
- Press Power Button 4times / Low Brightness
- Press Power Button 5times / Very low Brightness
- Press Power Button 6times / SOS Mode
- Press Power Button 7times / Power OFF

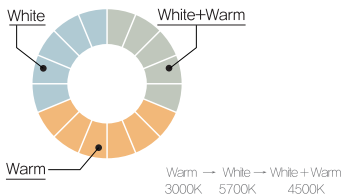


Press power botton for 2sec changed LED temperature.

After using 15seconds and press power button once,
The LED will be turned off immediately.

*Power indicator on charing



*Power indicator on using

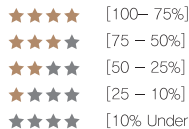

How to charge

Attach the Type C connector to the Type C outlet on the lantern body. Charge from an AC adapter or PC.

How to use Lantern as power bank

Connect the cable to the USB-A or USB-C outlet of the lantern body, and attach the connector compatible with your mobile device to charge the lantern.

NOTES

- ・ For safety, do not use the lantern while charging.
- ・ Be careful not to expose the product to direct light.
- ・ When children are used, please be sure to use them with their parents and be careful not to use them in a dangerous way.
- ・ Be careful not to store in places with extremely low or high temperatures, or in places with high humidity or dust.
- ・ Be careful not to give a strong shock to the product such as dropping or colliding as it may cause a malfunction.
- ・ This product has a waterproof function, never use it underwater.
- ・ If you find any abnormality in this product during use, please refrain from using it immediately and contact us.
- ・ This product may get hot if it is lit continuously.
- ・ Before using as a charger, be sure to check the connector compatible with the device you are using.
- ・ Please note that the warranty does not cover damage caused by the customer, such as dropping the product.

保証書

この度はWAQ製品をお買い上げいただきありがとうございます。
製品についての不良・故障・その他お気づきの点などございましたら弊社カスタマーセンターまで、メールもしくはお電話にてご連絡くださいませ。

この説明書は保証書のため、無くさないよう大切に保管してください。保証期間は製品の購入から1年間となります。

※お客様が原因の故障・製品の落下、水没による製品の故障等に関しましては保証の対象外となりますのでご了承ください。



WAQ株式会社

〒533-0033
大阪府大阪市東淀川区東中島1-6-14
新大阪第二日大ビル1007号室
Tel : 06-6195-8288
Fax : 06-6485-3715
E-mail : info@waqoutdoor.com